


The installation of these baths must be planned and supervised by a competent person. (who has appropriate training in plumbing and experience of normal practice for the installation of free standing baths.) These instructions assume this level of expertise and do not explain common bath fitting techniques. Please note that Libra does offer training in our factory

The Leg Set Assembly

Place bath upside down (on non scratch surface) and secure 2 cross leg peices (A) to the underside of the bath, using the 15mm screws provided (B)


Fit threaded bar (C) to each end of leg

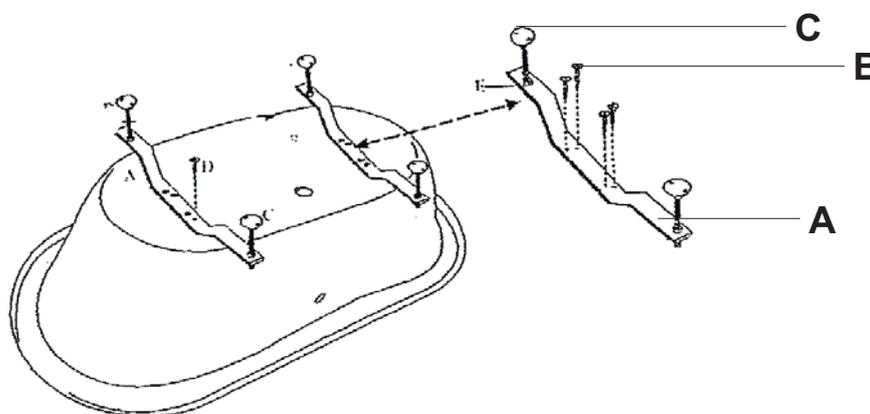

Leg Set Adjustment

Place bath surround upside down over the bath.


Place a “straight edge” across the surround and adjust the feet up to the underside of the straight edge.

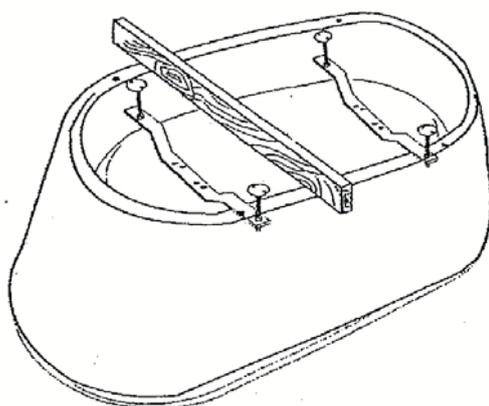

Positioning The Bath

Place the surround in correct position.
Secure to the floor by drilling four holes through the flat points of the inner rim into the floor.

Use 4 anchor bolts to secure the surround to the floor.

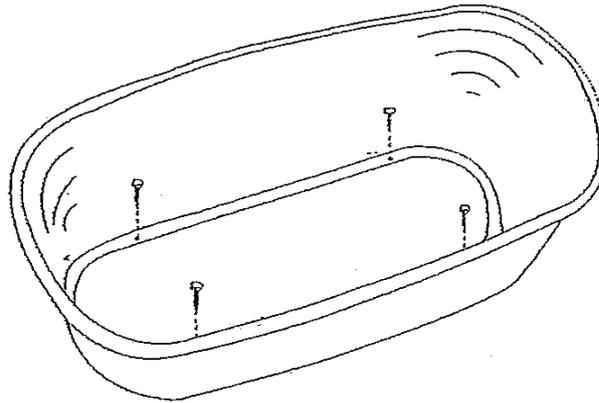


Fitting the bath into the surround

Fit the waste and the trap to the bath.

Fit the one end of the flexible hose to the waste pipe outlet in the floor using the hose clamps.
(Note the Angles of the waste fitting)

Fit the bath into the surround inserting a spacer (block of wood or similar) between the lip of the bath and the surround to allow you access to connect the other end of the flexible hose to the trap

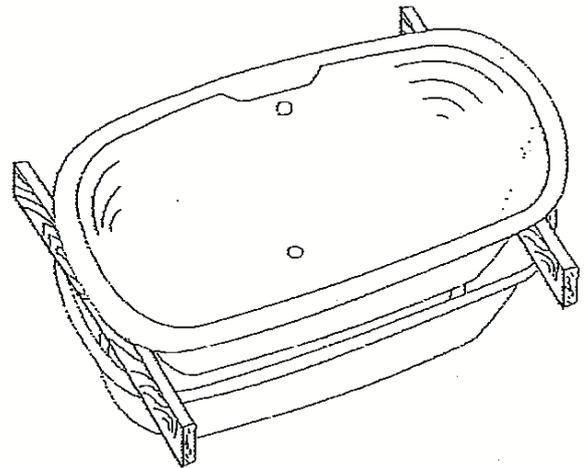

Final Fixing

While still in the raised position, half fill the bath with water and then allow to drain.

carefully Check all connections for leaks before permanent fitting.

Ensure that the bath fits properly onto the rubber seal located on the edge of the surround.

